



* G
* F
Central C

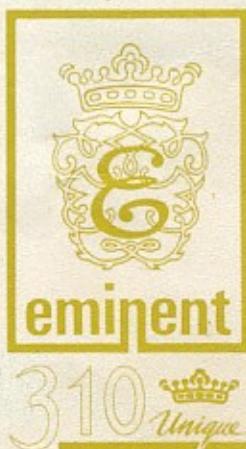

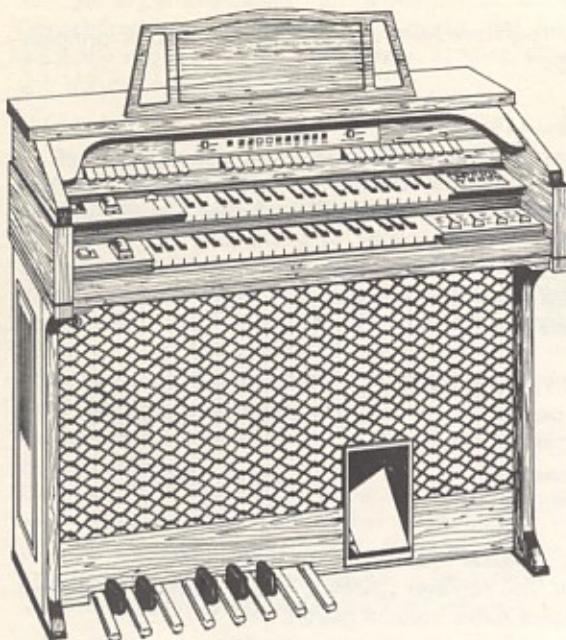

Op avontuur met Eminent

U hebt nu een orgel met bijna onbegrensde mogelijkheden.

Een orgel vol melodieuze schatten, rijk aan nieuwe en boeiende klanken. Lees deze handleiding door terwijl u achter uw orgel zit. U heeft het meeste plezier van uw nieuwe orgel als u de aanwijzingen in dit boekje werkelijk aanhoudt en uitvoert. Alleen dan kunt u alle mogelijkheden van dit orgel benutten én bent u weldra vertrouwd met uw nieuwe Eminent. Eminent wenst u op uw muzikale avontuur veel plezier en succes toe!

Garantie


Dit orgel is met de grootste zorg gekonstrueerd, zowel elektronisch als mechanisch. We stellen ons gedurende één jaar vanaf de leverdatum aan u garant voor alle gebreken, die aanwijsbaar berusten op fabrikagefouten. Deze garantie geldt alleen, indien u de garantiekaart (deze bevindt zich aan de achterzijde van het orgel in een plastic hoesje) binnen 8 dagen aan ons retourneert.

A l'aventure avec l'Eminent

Vous êtes à présent l'heureux propriétaire d'un orgue à propriétés musicales quasi illimitées. Vous êtes prêt pour effectuer un voyage à la découverte d'un monde rempli de trésors mélodieux, riches de nouveaux sons captivants. Lisez ce manuel en étant assis devant votre orgue. Votre nouvel orgue vous donnera le plus de satisfaction si vous suivez toutes les instructions figurant dans ce petit livre. Alors vous serez capable de profiter de toutes les possibilités de cet orgue et bientôt vous serez habitué à votre nouvel Eminent. Eminent vous souhaite bien du plaisir et du succès dans cette aventure musicale!

Garantie

Lors de la construction de cet orgue les soins les plus attentifs ont été apportés, tant du point de vue mécanique qu'électronique. Nous nous portons garants de tout défaut dont la cause, d'une façon indiscutable, incombe à un vice de fabrication durant une année à partir de la date de livraison. Cette garantie ne s'entend que si la carte de garantie (qui se trouve dans une housse en plastique au dos de l'orgue) nous est retournée dans les 8 jours après la date d'achat.

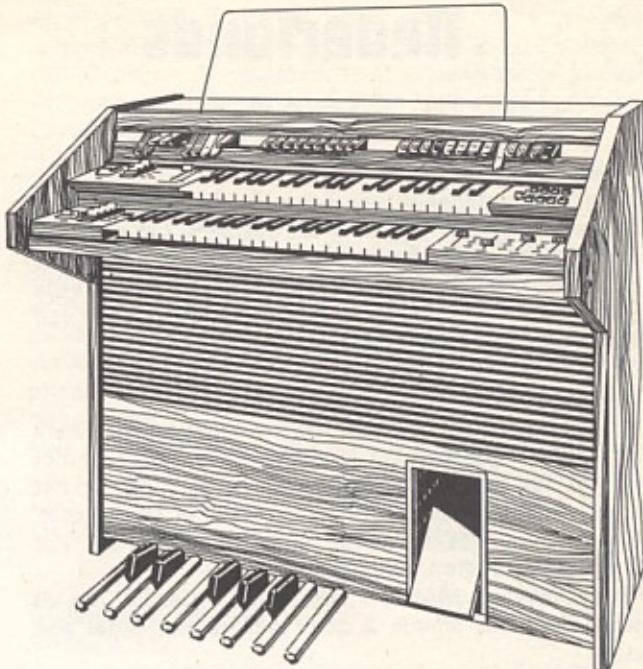

Auf Abenteuer mit Eminent

Jetzt haben Sie eine Orgel mit nahezu unbeschränkten, musikalischen Möglichkeiten. Eine Welt voll melodischen Reichtums an neuen, fesselnden Tönen schliesst sich auf und lädt zur Entdeckung ein.

Lesen Sie die nachfolgenden Seiten, wenn Sie hinter Ihrer Orgel Platz genommen haben. Folgen Sie den Anweisungen und versuchen Sie die beschriebenen Registrierungen. Bald werden Sie mit Ihrer Eminent vertraut sein; dann hat auch für Sie das wundervolle Abenteuer mit der Musik angefangen. Viel Vergnügen!

Garantie

Die Eminent Orgel ist äusserst sorgfältig konstruiert, sowohl in elektronischer als auch in mechanischer Hinsicht. Wir garantieren 1 Jahr nach dem Lieferungsdatum für alle offensichtlich auf Herstellungsfehler zurückzuführende Schäden. Diese Garantie gilt nur, wenn Sie den beiliegenden Garantie-Schein vollständig ausfüllen und direkt an N.V. Eminent, Bodegraven, Holland (innerhalb 8 Tage) zurücksenden. Sie finden den Garantie-Schein auf der Rückseite der Orgel in einer Kunststoff-Hülle.

An adventure with the Eminent organ

You now have an organ with almost unlimited possibilities. An organ filled with melodious treasures, rich in new and fascinating sounds. Read this instruction-manual while sitting in front of your instrument. You will obtain the utmost pleasure from your instrument by following and executing the instructions given in this booklet. Only then you will be able to use all the possibilities this organ provides and soon you will be familiar with your new Eminent. Eminent wishes you lots of pleasure and success with your musical adventure.

Guarantee

This organ has been constructed with the utmost care, electronically as well as mechanically. We guarantee this instrument for one year from delivery date against all deficiencies resulting from demonstrable faulty factory assembly. This guarantee is valid only, when the guarantee registration card (located at the back of the organ in an envelope) is returned to us within eight days.



English

Where to place the instrument?

In the left hand section of the organ is located the third channel of the 3D Orbitone system. This part of the organ should not be placed against a wall or a piece of furniture.

A minimum distance of 50 cm. should be maintained, so that the sound of the Orbitone system will be at its best.

Switching on

Carefully check to which voltage your organ has been adjusted, this may be done by comparing the voltage specified on the nameplate located at the back of the organ with the mains. If your mains show a different voltage, your dealer must adapt the instrument to the mains. The organ is switched on and off by means of the mains switch I. Pilotlamp Nr. 2 signalises if the organ is on.

REGISTRATION UPPER MANUAL

The Upper Manual consists of a three section registration and has three register groups (3, 5 and 6).

Solo group (3)

Oboe 8'
French Horn 8'
Trumpet 8'

Accent solos (4)

By using the register „Accent Solos” the solo voices will be accentuated.

Principal group (5)

In this group are to be found the specific classical organ voices, also suitable for modern music.

Diapason 16'
Principal 8'
Salicional 8'
Octave 4'
String 4'

Tibia group (6)

Tibia 16'
Tibia 8'
Tibia 4'

The registers in this group produce a warm round tone and combine perfectly with the solo and principal groups.

Cancel Tibias (7)

The „Cancel Tibias” register makes it possible with one movement to disengage or re-engage the depressed Tibia registers.

Strings ensemble Upper Manual

On page 15 a complete description of the strings ensemble may be found.

REGISTRATION LOWER MANUAL

The lower manual consists of a two section registration and has two register groups (13-14).

Principal group (13)

Diapason 8'
String 8'
Octave 4'

Tibia group (14)

Tibia 8'
Tibia 4'

These registers may very well be used simultaneously with the principal group.

Balance (19))

The lower manual volume can be regulated with sliding control 19. Hereby the volume of the lower manual can be adapted to that of the upper manual.

Strings ensemble Lower Manual (see page 15)

REGISTRATION PEDAL

The pedal registration consists of a two section registration and has two register groups.

Subbass 16'	{	17	Diapason 16'	{	16
Bourdon 8'			Gedeckt 8'		

Accent Pedal (15)

By using the register „Accent Pedal” the pedal registers will be given extra volume.

Pedal Sustain (24)

By depressing push button 24 a sustain effect on the pedal registers Subbass 16' and Bourdon 8' will be obtained. „Sustain” means that the tone will be retained for a short period of time after releasing the pedal.

Pedal Percussion

A percussion effect on the pedal registers Diapason 16' and Gedeckt 8' can be obtained by depressing push-button pedal-sustain 24.

The pedal-percussion effect comes about, whenever a pedal-key is depressed and held. The percussion and sustain effect may also be combined whenever both register groups (16-17) are used simultaneously.

SUSTAIN REGISTRATION GROUP (10)

By making use of the sustain group, instruments such as the piano, celesta and clavichord can be imitated. The sustain group consists of the following registrations.

Vibraharp 8'
Glock 8'
Organharp 8'
Celesta 8'
String 8'

The duration of the sustain effect is adjustable by means of register knob 9 (short sustain). Depressing this register shortens the duration of the sustain effect. The sustain effect is available on both manuals by means of the registers:

Sustain upper manual (11)
Sustain lower manual (12)

Accent Sustain (8)

The register „accent sustain” enables you to give the sustain registers an extra accent.

Vibrato (18)

The vibrato control (18) makes the sound of the organ produce a brilliant floating effect. The vibrato is adjustable from zero to maximum.

Timbre (20)

The timbre regulator (20) makes it possible to control the timbre of the entire organ to suit your own taste. With this control you can change from a bright sound to a deeper sound.

Reverberation (21)

In cathedrals, concert-halls and other large areas your organ would benefit from a natural echo. We call this reverberation. In your living room there is no echo present but the sliding control 21 makes it seem as though your organ is located in an immense area. You can regulate the reverberation from maximum to zero.

Percussion (22)

What is percussion? Percussion on an electronic organ can be best compared with the striking of the hammer on a piano string or other percussion instruments. When you strike a tone on a piano the sound slowly ebbs away. In an ingenious technical way it has now been made possible to obtain this effect on your Eminent 310 Unique. The percussion possibilities are as follows.

By depressing push button 22, the entire solo and principal groups of the upper manual are connected to the percussion system. Further more, sliding control 25 enables you to regulate the duration of the percussion. In which way do you get the most pleasure from the percussion-effect?

The way to play with percussion is easy to learn, but differs a little from the normal way to play an electronic organ: A short period of practice is needed.

- a. Switch on the percussion knob 22 and the registers Principal 8' and String 4' and place the sliding control 25 in position marked „short”.
- b. Play the C-scale. Notice that only the first key produces a tone, the others do nothing.
- c. Try again, but before depressing a new key, release the previous one. You will now notice that each tone comes through, but flows away rather rapidly. This is because the sliding control 20 is in the „short” position. Now move the control into the „long” position and your tone will be retained much longer.

Vibra (23)

The Eminent Vibra (25) makes it possible to imitate the striking on, for example of a violin or cello. You will notice that the tone begins fixed and by means of the vibra-effect it begins to float. Consult your percussion guide for how to use the vibra.

Preset

It is possible to use percussion-knob 22 as a preset key. The following example of how the preset works, may serve you as a guide.

- a. Depress the entire tibia-group (6) of the upper manual. Now play a melody in a flowing manner.
- b. Depress percussion knob 22. You can now engage each register of the principal and solo groups, without hearing them being engaged (preselecting). You are now able to mix the pre selected registers with the Tibia group at any moment by releasing push-button 22.
- You should ensure to keep playing in a flowing manner.
- c. Re-engaging your percussion knob will cancel your preset selections.

Orbitone 3D Chorus-Tremolo (26-27)

This organ has been equipped with an electronic Orbitone 3D system.

Tremolo: rapid acoustic tremolo for modern music.
Chorus: slow acoustic tremolo for classical music.
 The Orbitone effect gives your organ a substantial enrichment of the musical possibilities. Switch 26 allows you to engage the Orbitone 3D system. Switch 27 gives you the opportunity to choose between Chorus and Tremolo.

The Strings Ensemble is a completely new registration which creates a symphony orchestra effect. It is possible with the "Strings Ensemble" to multiply all Solo voices such as the Trumpet, French Horn, Oboe, Clarinet and Flute. In fact, you have a whole symphony orchestra right inside your own organ, which offers unlimited possibilities.

The "Strings Ensemble" enables you to reproduce world famous sounds such as those of Mantovani, The Amsterdam Symphony Orchestra, James Last, Herb Alpert etc. The "Strings Ensemble" registration consists of:

Upper Manual

Violins/Cellos 8' (32)

Violins 4' (33)

Depressing push buttons 32 and/or 33 will cancel all Principal - Solo - and Sustain registers, of the upper manual. They clear the way for the String orchestra. When both push-buttons are returned to their former rest position, the cancelled registration of the upper manual will return. It is possible to change the preset registration while playing.

Sustain Strings (34)

Push button 34 gives you the opportunity to obtain a sustain effect with the strings-ensemble whereby the registration is expanded. This effect is particularly well suited when imitating for example a string orchestra, where the sound of the strings flow simultaneously together. When using push button 34 the normal sustain registration is automatically disconnected. The sustain-strings effect may be combined with the entire registration of the upper manual. The duration of the string sustain sound may be adjusted with register 9 (long-short).

Ensemble principal and soloregisters (35)

The complete principal and solo register groups are regulated by push button 35 by way of the strings ensemble. This affords many new possibilities. For example, whenever a soloregister trumpet is depressed, you not only will hear one trumpet, but the entire trumpet section.

The complete strings ensemble registration may be mixed with the Tibia registration 6.

Lower manual

Violins/Cellos 8' (37)

Violins 4' (38)

Here also it is possible to make room for the string orchestra by depressing push buttons 37 and 38. Whenever both buttons are returned to their former rest positions, the original registration is again available. The possibility of pre-selection is also available here.

Sustain strings (39)

This push button control gives the strings ensemble a sustain effect. The duration of the sustain effect is adjustable by means of register 9 (long-short). This control disconnects the entire registration of the upper- and lower manuals.

Volume lower manual (36)

When using the strings ensemble registration, the balance regulator 19 is out of action. By means of regulator 36 the volume of the lower manual can be adapted to that of the upper manual.

Pedal

Pedal strings (40)

Depressing this control gives the grey pedal registers a string effect.

GENERAL REMARKS ABOUT THE STRINGS ENSEMBLE

- Timbre regulator 20 does not work on the strings ensemble.
- In combining organ registration and strings ensemble all effects like Percussion, Vibrato, Vibra and Orbitone may be used.
- However when using the strings ensemble, Vibrato should not or hardly at all be adjusted. It is sufficient to turn the Vibrato knob no further than $\frac{3}{4}$.
- In the chapter „Registration examples“ you will find many possible combinations of the strings ensemble.

Two channels: Normal and Orbitone

As the „Eminent 310“ has two separate amplifiers, each with its own loudspeaker, many possibilities are available by combining push buttons 28 to and including 31. With these push buttons the different registration groups can be linked on to

- Normal channel (fixed or with the electronic vibrato 18);
- Orbitone 3D channels.

Example:

When push buttons 28 and 29 are up (that is to say upper manual on normal channel) and push buttons 30 and 31 are depressed (that is to say lower manual on Orbitone channel) the feasibility arises of being able to play „fixed“ on the upper manual and with the floating Orbitone effect on the lower manual.

Extra amplifying-Tape recording

For extra amplifying purposes, „output 3 channel amplifier“ can be used. The exit is located at the rear of the organ.

As the „Eminent 310“ has been fitted with the Orbitone 3D system, the recording on tape or the extra amplifying with Orbitone effect is only possible by using an excellent microphone.

However it is also possible to use the special 3 channel box (see: output 3 channel amplifier). Your dealer will be pleased to give you more particulars about this box.

Extra entrance

This organ has an extra entrance. By means of this entrance it is possible by way of the sound-channel to increase the volume of the following apparatus:

Record player with crystal pick-up

Tape recorder (diode exit)

Wireless (diode exit)

Rhythm unit

It is advisable to have your dealer explain how to fit the connection.


The dealer should be informed of the

a. entrance sensitivity

b. entrance impedance

c. connection to the organ with the use of a mono guitar plug.

The volume can be controlled with the swell pedal.

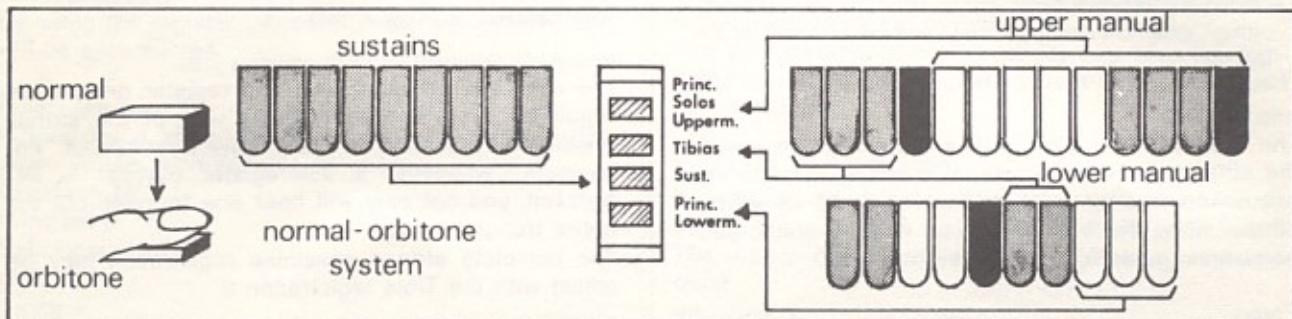

PLAYING WITH THE USE OF HEADPHONES

The connection for the use of the headphones is located at the front of the organ, left below the key board. As soon as the plug of the headphones has been connected, the loudspeakers of the organ will automatically shut off. This means you will be able to practise at your ease without disturbing anyone. What's more, in contrast with the earlier acoustic system, it is now possible with the Orbitone 3D system to obtain the stereo dimensional effect by way of the headphones. By this means the playing of the organ has become infinitely more beautiful.

Orbitone and normal channel may be used simultaneously or separately by using push buttons 19 and 20. It is important to use headphones suitable for the electronic organ. Most headphones available are not suitable. For playing the electronic organ using headphones only the best will do. Your dealer will be glad to advise you.

Technical details for headphones:

Connection 8 Ohm Maximum Power 0,5 Watt. Frequency range 25-15.000 Hz.

TECHNICAL DETAILS

Mains frequency 50 Hz/60 Hz.

Mains voltage 115-220 V.

Power rating: 50 W.

Power output: 30 W.

Loudspeaker impedance: 4 Ohm and 16 Ohm.

3D output: max. 2V/100 Ohm.

Extra input 300 mV 0,15 MOhm.

Suited for 8-16 Ohm headphones.

Spare fuses

In a small envelope at the bottom of the organ 3 spare fuses will be found: 1 x 1,6 A slow, 2 x 2 A. Your dealer will be able to tell you what to do with these fuses.

Registration examples

The registration of an organ is very important. The more so, when the possibilities are as many as they are with the Eminent 310.

In order to be a guide to you, we have prepared a number of registration examples that can be used as a basis for your own taste and imagination. To give you an impression, which effects will give the best results when playing some definite music, we have illustrated several examples with a few short pieces of music.

Playing these short pieces of music will illustrate the special effects obtainable.

The rules of registration

The registration examples are subdivided into:

- Solo registrations (specific solo voices)
- Modern registrations (for popular music)
- Classical registrations (for classical and religious music)
- Special effects (such as piano, zither, etc.)
- Ensemble effects (orchestra effects and combinations with organ registration).


The Main registration (stated by numbers e.g. 2) can be adjusted by depressing the with a dot marked register. The sliding controls also have to be adjusted as prescribed.

Contrast registrations are possible with the main registrations. These are marked by letters, e.g.t. The main registration remains in normal position. By switching only the marked registers and push buttons on or off, (see music examples; switching on is marked +, switching off is marked —), a clear contrast develops. The variation/contrasts can be applied individually or in combination with the main register. In this way the tone-colour of the organ can be changed rapidly with only a few actions.

Fixed registrations

The lower manual and pedal are intended for accompaniment. The registrations of these need not be changed very often. The so-called fixed registrations are outlined with a dotted line.

On it has been stated by which registration numbers this fixed registration can be retained unchanged. Simple variations on this can be made by means of a contrast-adjustment as described above. To prevent a registration getting lost by not playing on the correct place of the manual, you will find with every registration-example the following indications.

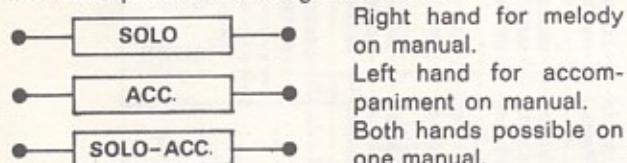

When Orbitone has been marked as a dot between brackets (●), you may choose between Chorus and Tremolo.

RITHMIX

The model Eminent 310 Theatre has a built-in Rhythm section.

With the Eminent 310 Unique it is possible to add an externally mounted rhythm section.

The Rithmix has the following features:

RHYTHM SELECTION

The following rhythms are available:

- * Waltz
- * Rock
- * Samba
- * March
- * Slow Rock
- * Bossa Nova
- * Swing
- * Cha-cha

It is possible to depress several different keys at the same time and obtain completely different and new rhythm. Some combinations examples: Waltz/March, Waltz/Swing (jazz waltz), March/Swing, Rock/Cha-cha, Rock/Bossa Nova etc.

RITHMIX START

Using this push button starts or stops the Rithmix at any desired moment.

RHYTHM TEMPO

With this slide control, the tempo of any rhythm can be regulated.

TEMPO LIGHT

The tempo light glows brightly at the first beat of every two bars (when playing a waltz, at the first beat of every four bars), so that you always have a visual tempo control.

RHYTHM VOLUME

With this sliding control, the volume of the Rithmix can be regulated, making it adjustable to your taste.


PEDAL START

With this push button the whole rhythm section is operated by the pedal. As soon as you depress one pedal, the Rithmix will accompany for two bars, then stop until you operate the pedal again your playing (when playing a waltz, it will accompany your playing for four bars). This way, you may start or stop the Rithmix by interrupting your pedal playing for a short moment at the first beat of a bar.




SOLOS

FLUIT
FLÖTE
FLÜSTE
FLUTE

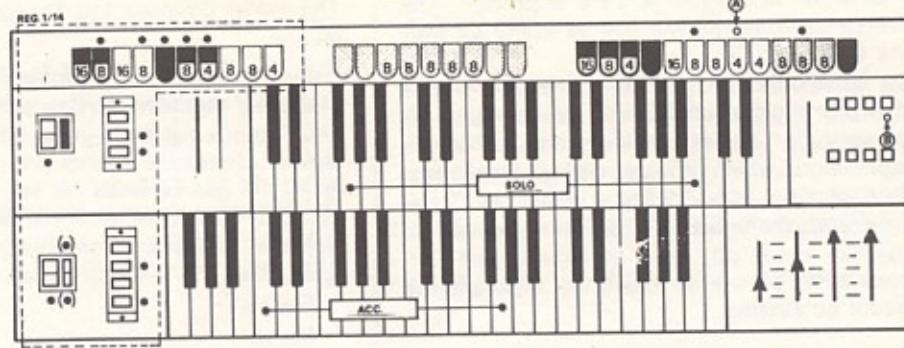

CELLO
VIOLONCELLE

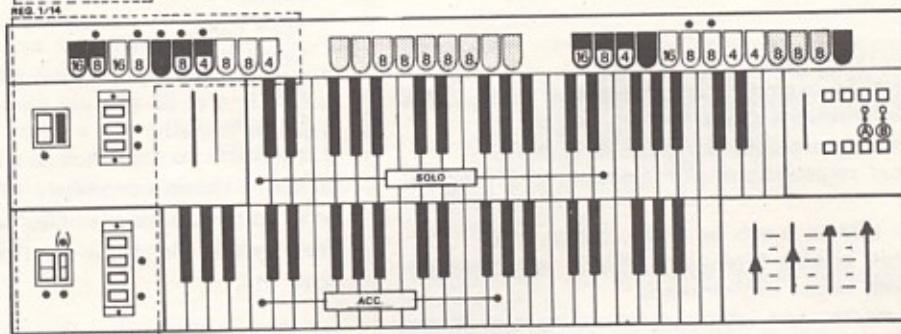

VIBRA speelwijze: zie blz. 3

VIBRA Spielweise: sehe Seite 7

Le jeu du VIBRA: voir page 11


The way of playing VIBRA: see page 15

REG. 3


BARCAROLLE

Offenbach

4
HOBO
OBOE
HAUTBOIS

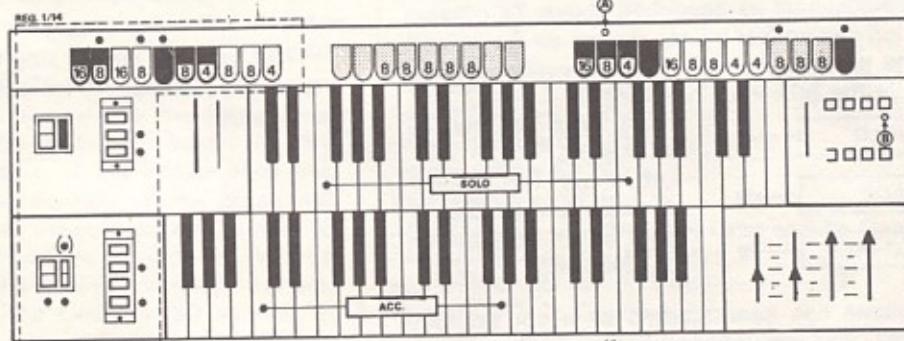

6
VIOOL
GEIGE
VIOLON
VIOLIN

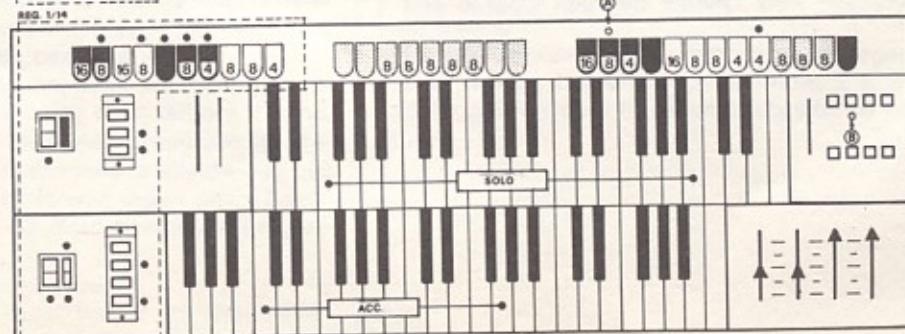

SOLOS

10 SOLO SUSTAIN

11 TROMPET
TROMPESTE
TROMPETTE
TRUMPET

REG: 11+ B

TRUMPET TUNE

REG: 11

TRUMPET CHORUS

12 SAXOFOON
SAXOPHON
SAXOPHONE

13 FRANSE HOORN
FRENCH HORN
COR

REG: 13 + B

FRENCH HORN

MODERN • MODERNE

16 TIBIA CHORUS

REG. 16/30

Keyboard: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Pedal: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Registers: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Controls: SOLO, ACC.

**17 THEATER ORGEL
ORGUE DE THEATRE
THEATRE ORGAN**

REG. 16/30

Keyboard: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Pedal: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Registers: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Controls: SOLO, ACC.

18 STRING CHORUS

REG. 16/30

Keyboard: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Pedal: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Registers: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Controls: SOLO, ACC.

**20 MODERN A
MODERNE A**

REG. 16/30

Keyboard: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Pedal: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Registers: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Controls: SOLO, ACC.

**21 MODERN B
MODERNE B
[ROCK]**

REG. 16/30

Keyboard: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Pedal: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Registers: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Controls: SOLO, ACC.

**23 MODERN E
MODERNE E
[PERC.]**

REG. 16/30


Keyboard: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Pedal: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.


Registers: 16' B, 16' B, 8' B, 8' B, 8' B, 8' B, 4' B, 8' B, 8' B, 8' B, 16' B, 4' B, 16' B, 8' B, 8' B, 4' B, 4' B, 8' B, 8' B.

Controls: SOLO, ACC.





MODERN • MODERNE

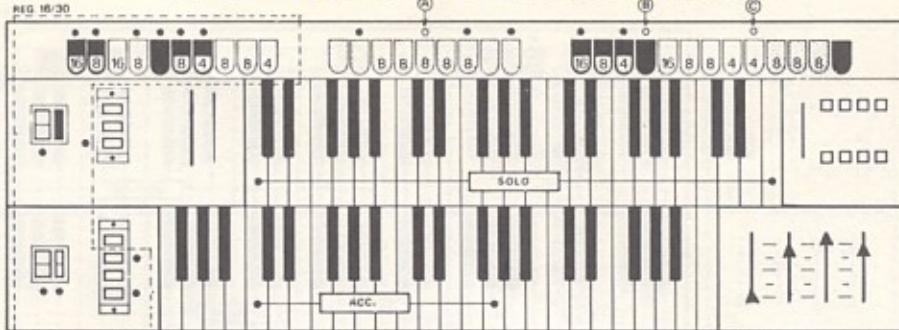

MODERN G
MODERNE G

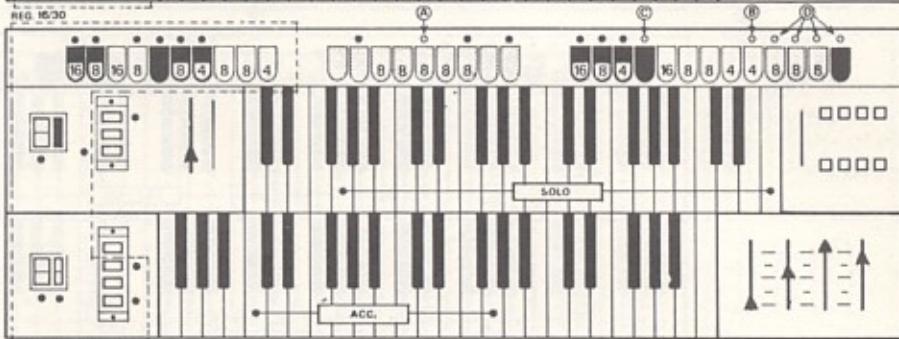


Uw eigen register keuze
 Ihre Register Wahl
 Votre choix des registres
 Your choice of stops

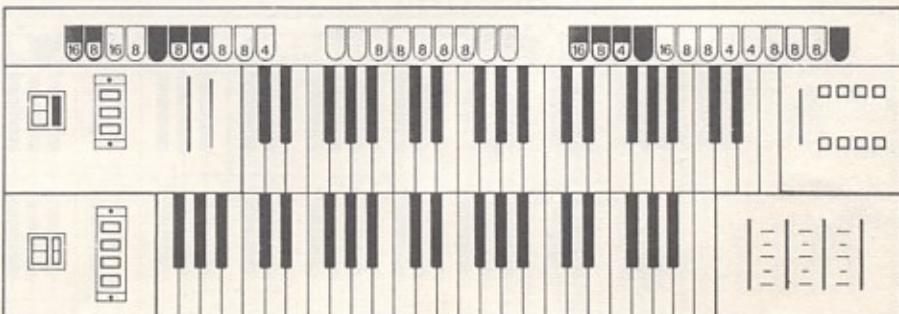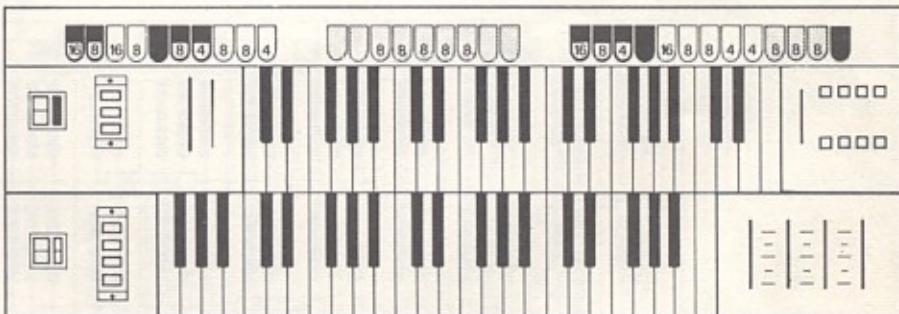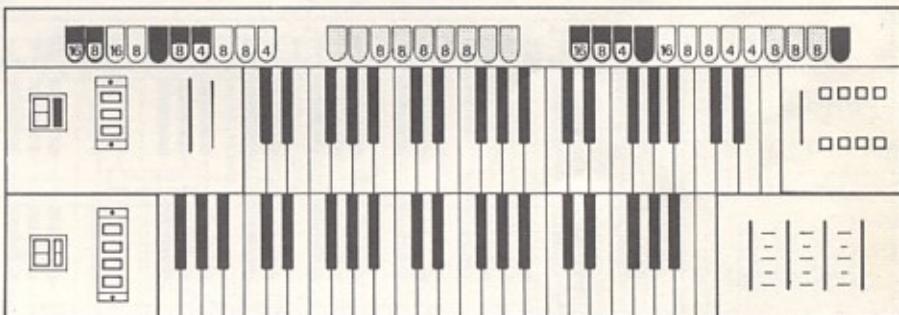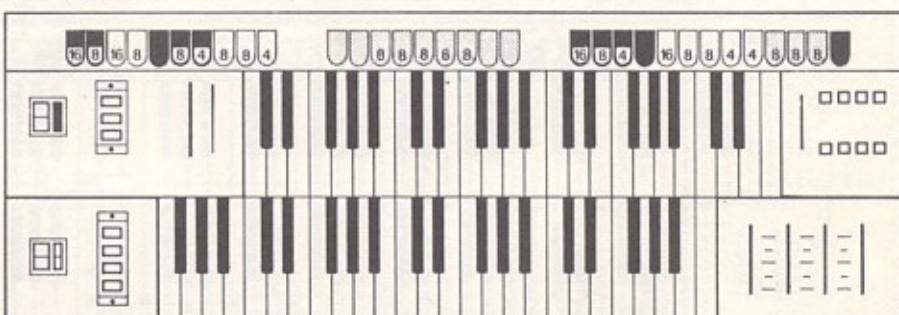

KLASSIEK • KLASSISCH • CLASSIQUE • CLASSICAL


BAROK
BAROCK
BAROQUE

I

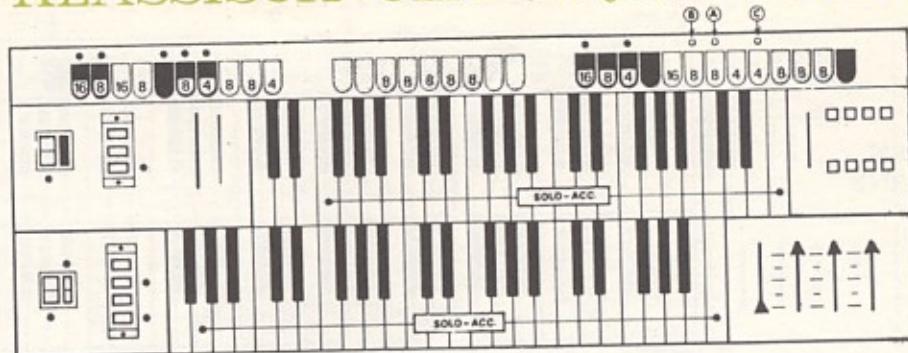


BAROK
BAROCK
BAROQUE

II

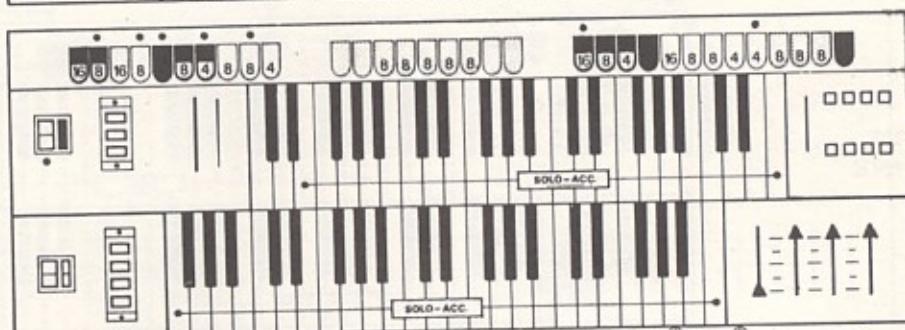

PASTORALE
PASTORAL


B

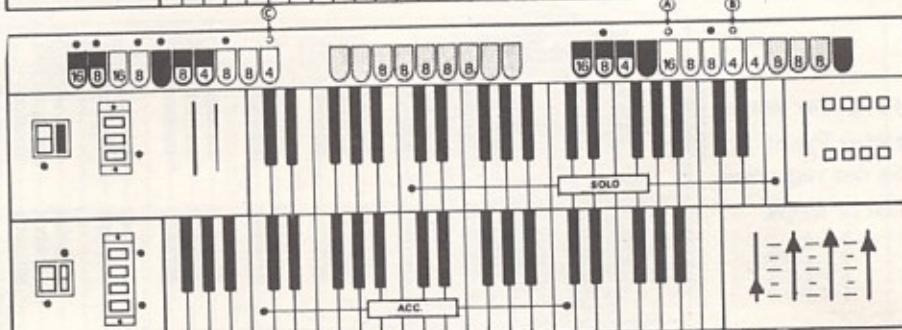

ZANG-
BEGELEIDING
SANG-
BEGLEITUNG


VOCAL
CHORAL-
ACCOMPANIMENT

I

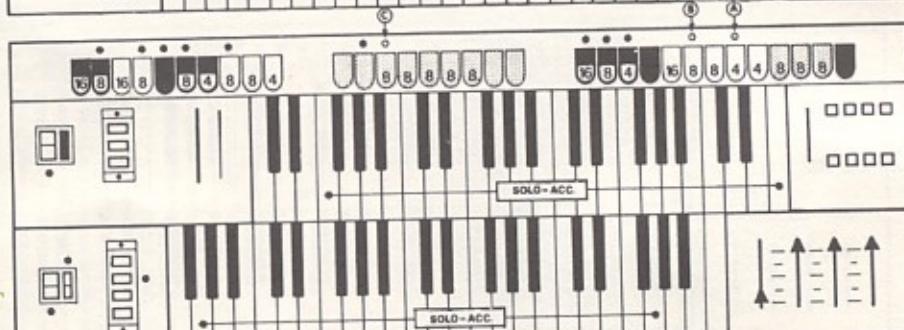


KLASSIEK
KLASSIK
CLASSIQUE
CLASSICAL

I

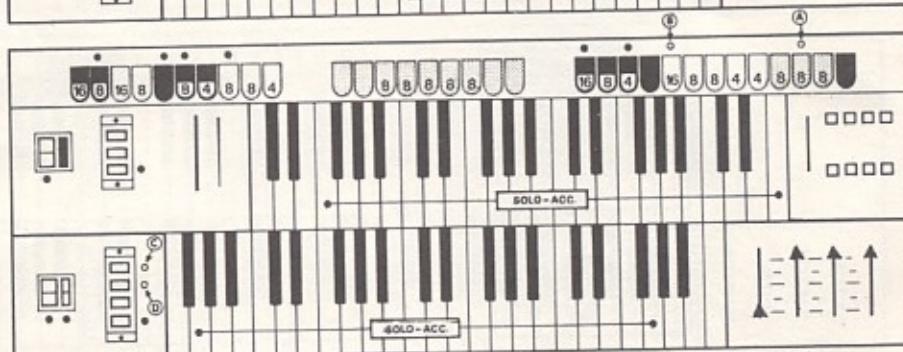

KLASSIEK
KLASSIK
CLASSIQUE
CLASSICAL

II

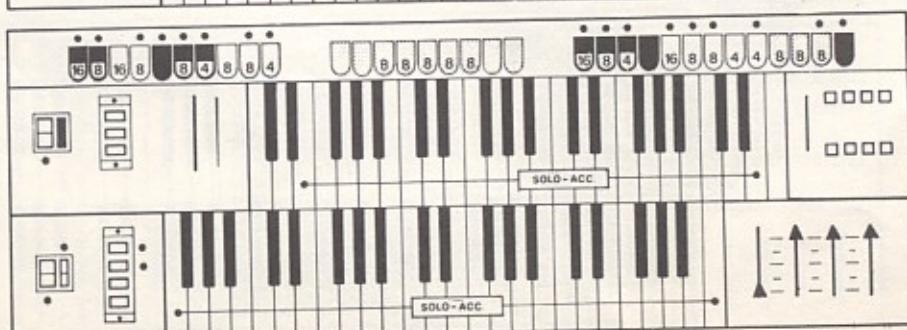

KLASSIEK • KLASSISCH • CLASSIQUE • CLASSICAL




KLASSIEK
KLASSIK
CLASSIQUE
CLASSICAL
III

39


TRIO SPEL
TRIO
JEU DE TRIO
TRIO PLAY

40


UW EIGEN REGISTER KEUZE
 IHRE REGISTER WAHL
 VOTRE CHOIX DES REGISTRES
 YOUR CHOICE OF STOPS

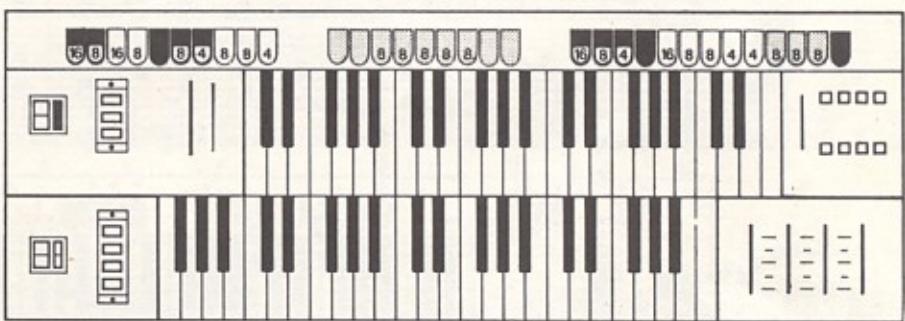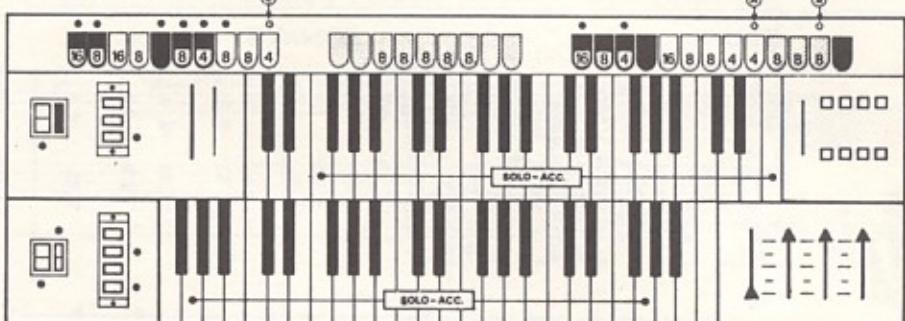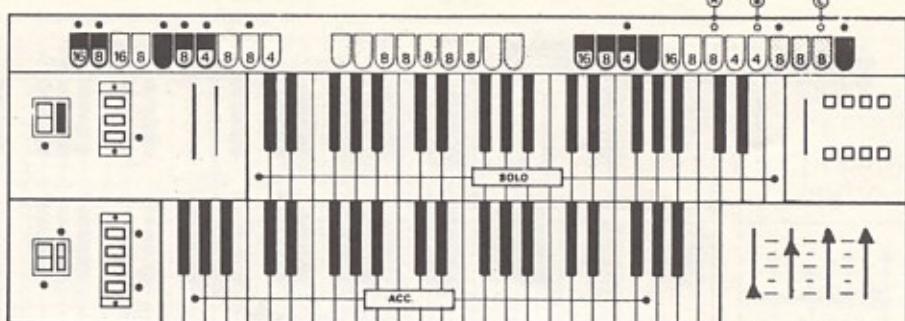


○

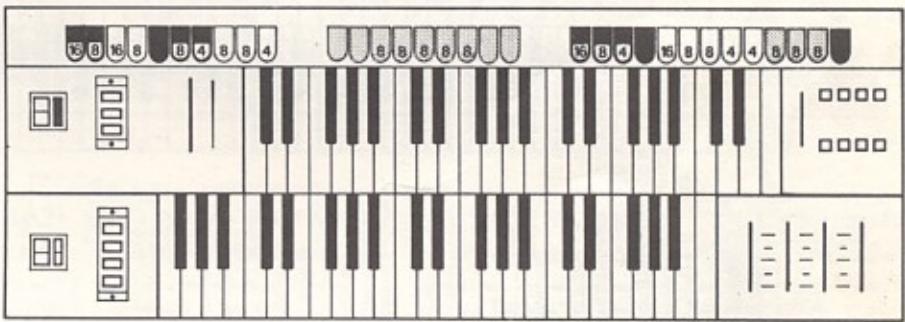

○

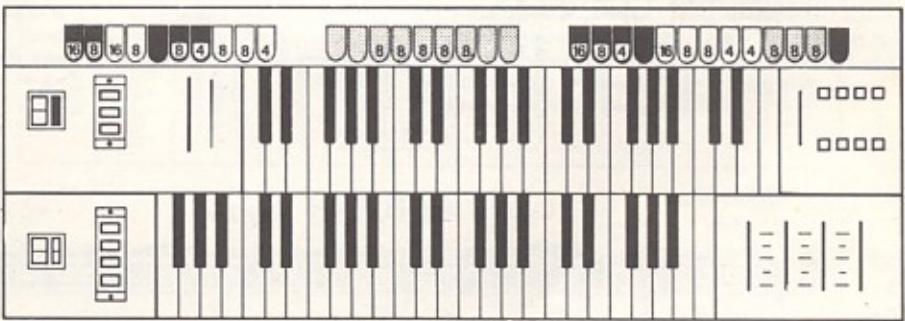

○

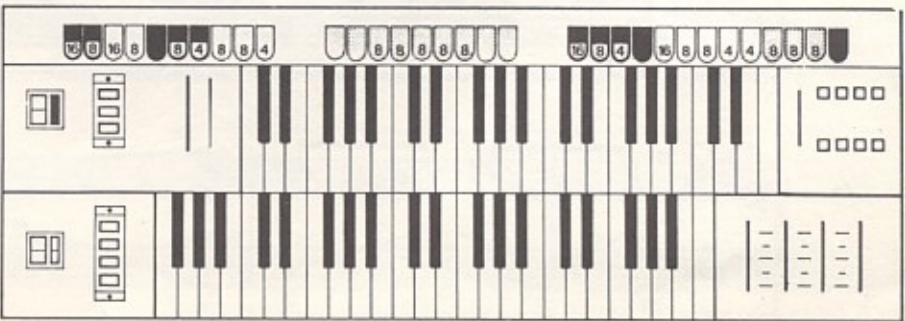


SPECIALE EFFEKten
SPEZIALEFFEKTE

EFFETS SPECIAUX
SPECIAL EFFECTS

PIANO
KLAVIER

45

Ⓐ piano + organ

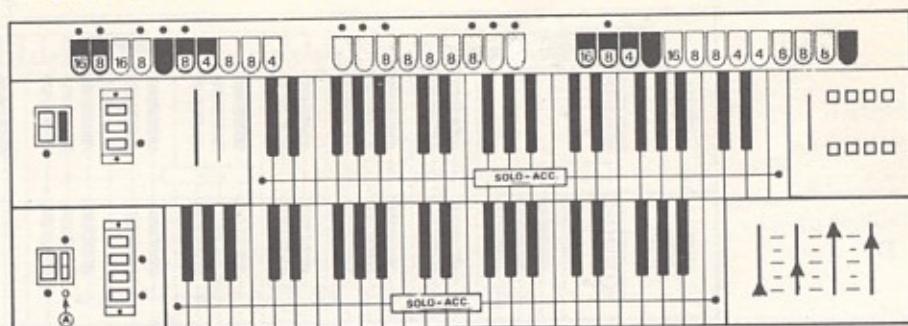

REG. 45

SONATE

Solo
Acc.
Ped.



HARP
HARFE
HARPE

47

HARP

Speelwijze:

Speel met de rechterhand de melodie op het bovenklavier. Maak een glissando met uw wijsvinger [linkerhand] van de aangegeven noot over de zwarte toetsen naar boven en terug.

HARFE

Spielweise:

Spiele Sie mit der rechten Hand die Melodie auf das Oberklavier. Machen Sie ein Glissando [ein Gleiten] mit dem Zeigefinger [linken Hand] von der angegebenen Note über den Tasten nach oben und wieder zurück.

HARPE


Le maniere de jouer:

Jouez la mélodie avec la main droite sur le clavier supérieur. Faites un glissando avec votre index, de la note indiquée sur les touches noires en haut et de retour.

HARP

The way of playing:

Play the melody with the right hand on the upper manual. Make a glissando with your forefinger [left hand] of the note indicated over the black keys upwards and back again.

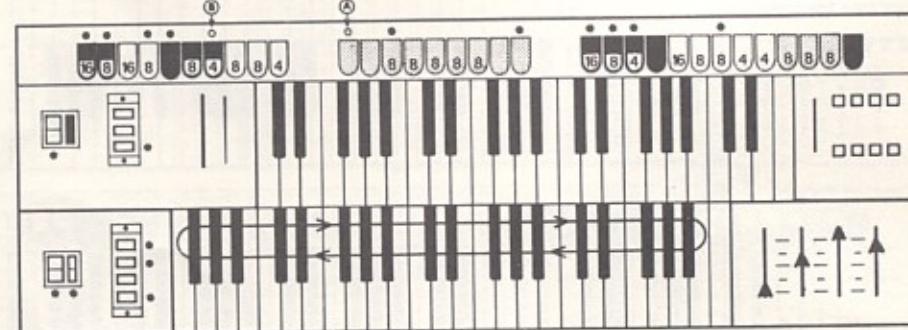

REG. 47


MORNING MOOD

E. Grieg op. 46

Solo
Acc.
Ped.

SPECIALE EFFEKTEN
SPEZIALEFFEKTE

EFFETS SPECIAUX
SPECIAL EFFECTS

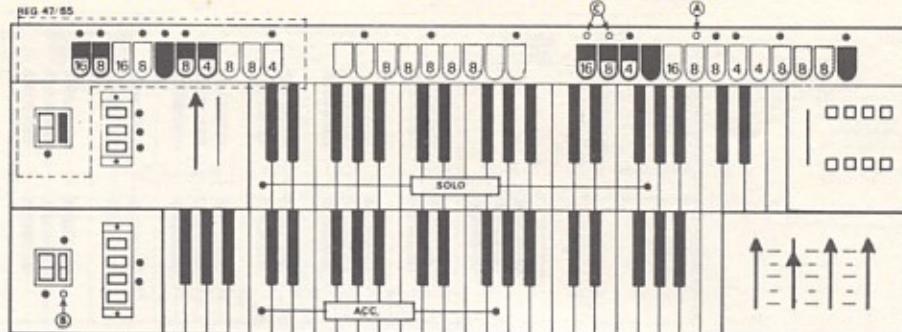


HAW. GITAAR.
HAW. GITARRE
GUITARE HAW
HAW GUITAR

51


ALOHA HOE

REG. 51

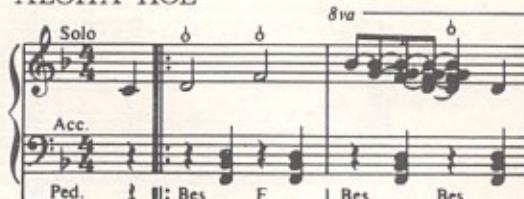



CITER
ZITHER
CITHARE

53

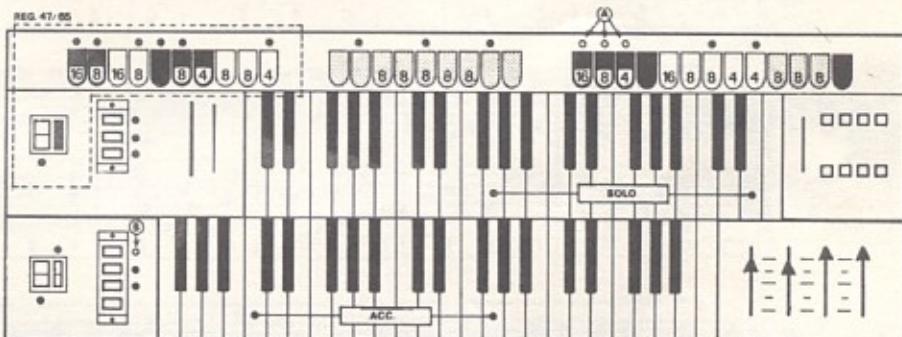


REG. 53

CITHER SOLO

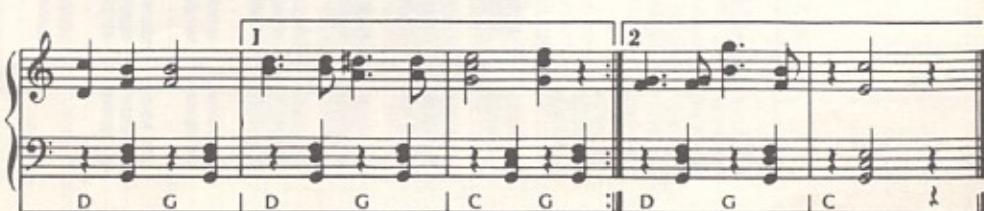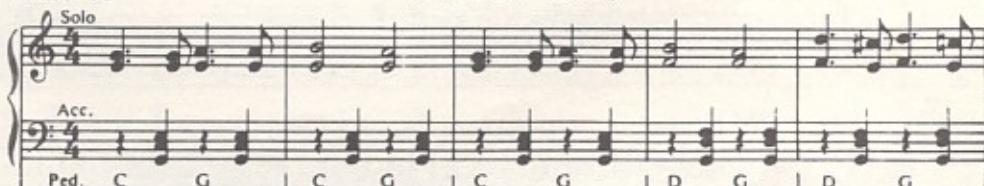

SPECIALE EFFEKten
SPEZIALEFFEKTe

EFFETS SPECIAUX
SPECIAL EFFECTS

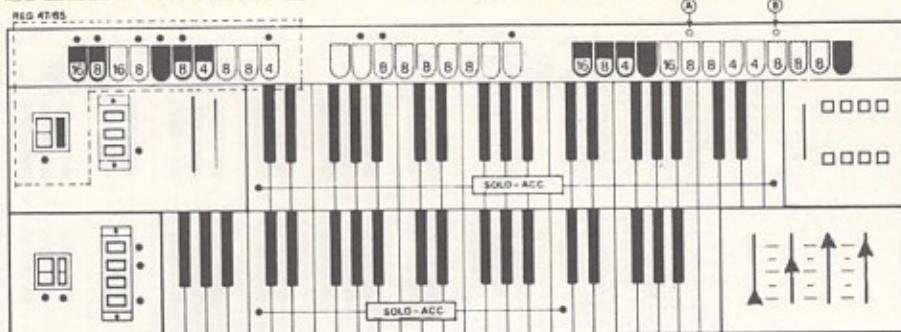


CELESTA
CELESTE

54
SPEELDOOS
SPIELEDOSE
BOITE A MUSIQUE
MUSIC BOX

REG. 54 CELESTIA

Solo, Acc., Ped.
F D G C G C F C F D G C G C F

Detailed description: Musical score for Celestia registration (REG. 54). It features two staves: Solo (treble clef) and Acc. (bass clef). The piano keys are labeled below the notes: F, D, G, C, G, C, F, C, F, D, G, C, G, C, F. The tempo is 84 BPM.

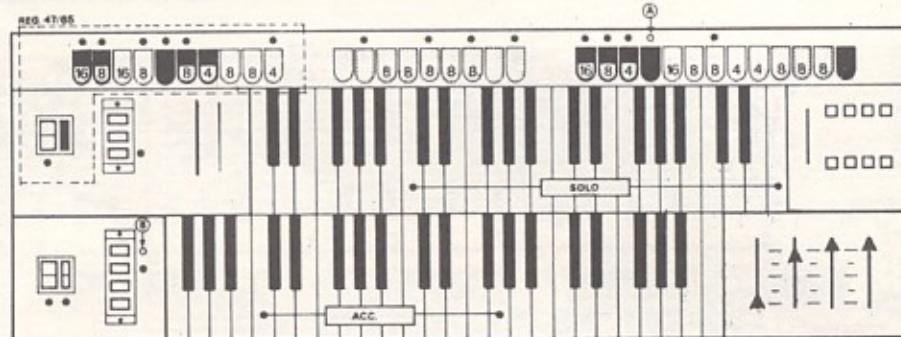

REG. 55 LULLABY Joh. Brahms

84 BPM
Ped C C C C G G G G


Detailed description: Musical score for Lullaby by Joh. Brahms. It features two staves: Treble and Bass. The piano keys are labeled below the notes: C, C, C, C, G, G, G, G. The tempo is 84 BPM.



84 BPM
G G G G C C C C F F F F C C C C

D G G F C C G G C C C C C C C C

Detailed description: Continuation of the musical score for Lullaby by Joh. Brahms. It features two staves: Treble and Bass. The piano keys are labeled below the notes: G, G, G, G, C, C, C, C, F, F, F, F, C, C, C, C. The tempo is 84 BPM.

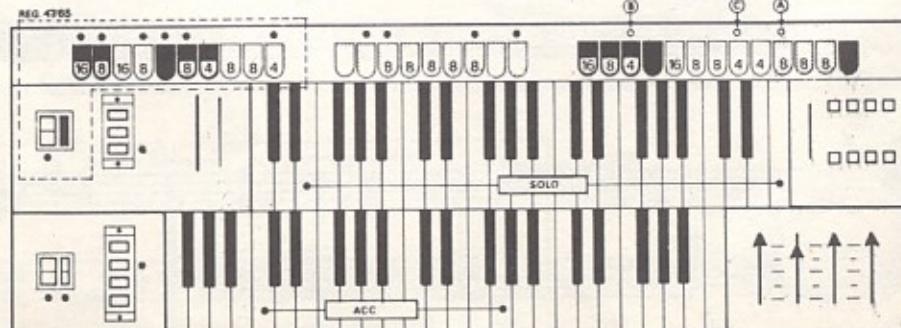


55
VIBRA HARP
VIBRAHARFE
HARPE DE VIBRA

SPECIALE EFFEKTEN
SPEZIALEFFEKTE

EFFETS SPECIAUX
SPECIAL EFFECTS

KLOKKENSPEL
GLOCKENSPIEL
CARILLON
CHIMES

57

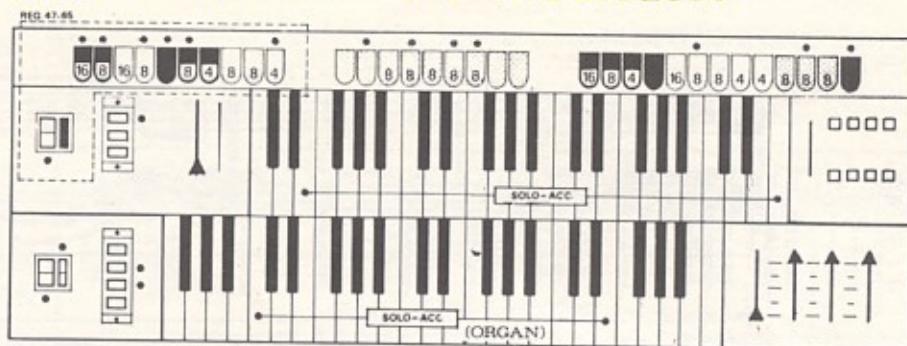

REG. 57

BIG BEN

8th

Solo

Solo

Java Bassa


Java Bassa

Ped. C

Music score for REG. 57 featuring two solo parts and Java Bassa accompaniment.

58

MARIMBA

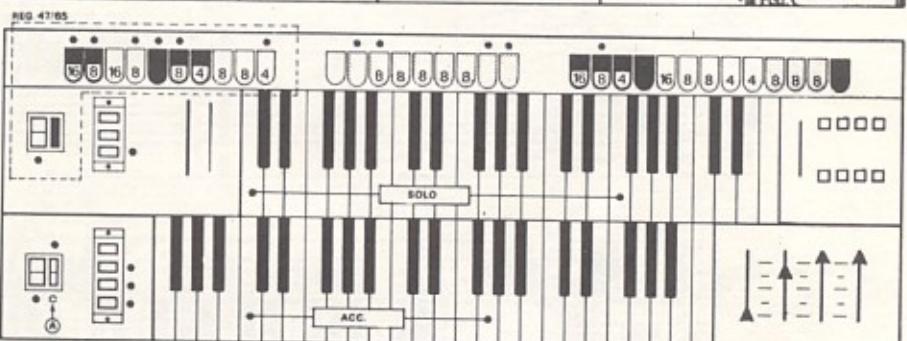

REG. 59

LIEBES TRAUM

Solo

Acc.

Ped. |: F | F | E | E |

Fr. List

Music score for REG. 59 titled "LIEBES TRAUM". It features a solo part, an accompaniment part, and pedal notes. The score ends with "Fr. List".




Music score continuation for REG. 59, showing measures D, D, G, G.

Music score continuation for REG. 59, showing measures C, C, F, F, F.

65

DOEDELZAK
SACKPFEIFE
MUSSETTE
BAGPIPES

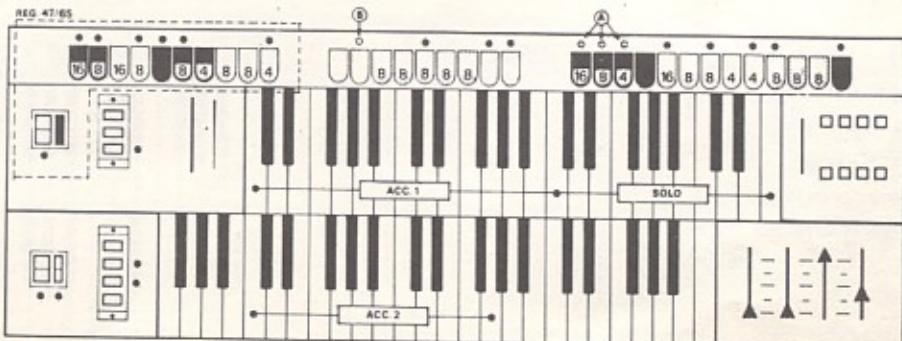

SPECIALE EFFEKten
SPEZIALEFFEKTE


EFFETS SPECIAUX
SPECIAL EFFECTS

BAGPIPE - Music

REG. 65



ECHOLET
ECHOLETTE

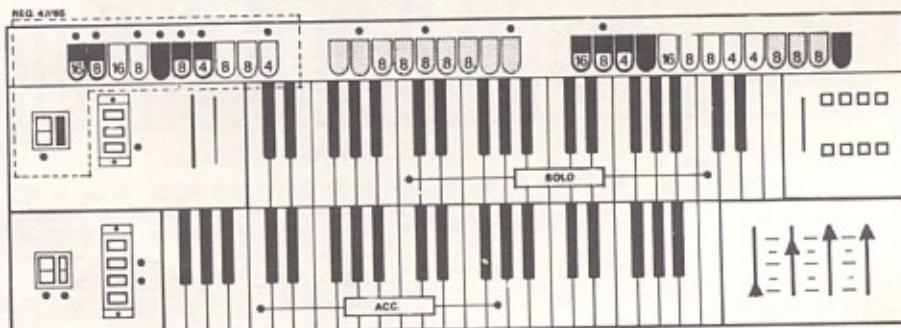


ECHO

Uw eigen register keuze

Ihre Register Wahl

Votre choix des registres

Your choice of stops

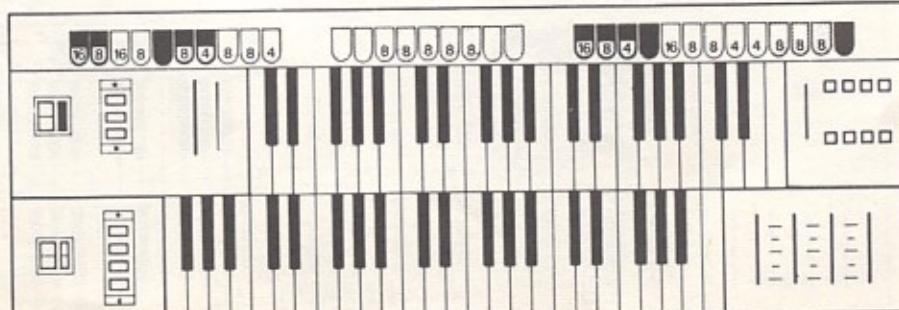

ENSEMBLE EFFEKTEN ENSEMBLE EFFEKTE

EFFETS D' ENSEMBLE ENSEMBLE EFFECTS

Speelart für das Strings Ensemble

De strings ensemble klanken komen het meest tot zijn recht wanneer zoveel mogelijk LEGATO (gebonden) wordt gespeeld.
Het legato spel is van belang bij gebruik van de druktoetsen:
nr. 32 en nr. 33 voor de rechterhand;
nr. 37 en nr. 38 voor de linkerhand;
nr. 40 voor het pedaal.

Spieldaten für das Strings Ensemble


Die Strings Ensemble Effekte hören sich am besten an, wenn sie so oft wie möglich Legato (= gebunden) gespielt werden. Das Legato-Spiel ist besonders wichtig beim Gebrauch nachfolgender Drucktasten:
Nr. 32 und Nr. 33 für die rechte Hand;
Nr. 37 und Nr. 38 für die linke Hand;
Nr. 40 für das Pedal.

Le jeu du Strings-Ensemble

Les sons du strings-ensemble sont le mieux mis en valeur en jouant le plus souvent possible "legato" (de façon liée). Le jeu "legato" est important si les boutons poussoirs suivants sont utilisés:
Nº 32 et n° 33 pour la main droite.
Nº 37 et n° 38 pour la main gauche.
Nº 40 pour le pédalier.

The way to play with the aid of the Strings Ensemble.
The strings ensemble sound obtain the best effects when playing Legato (fixed). Playing Legato is important with the use of the push buttons:
Nr. 32 and nr. 33 for the right hand.
Nr. 37 and nr. 38 for the left hand.
Nr. 40 for the pedal.

80
ORCHESTRA MODERN
ORCHESTER MODERN
ORCHESTRE MODERNE

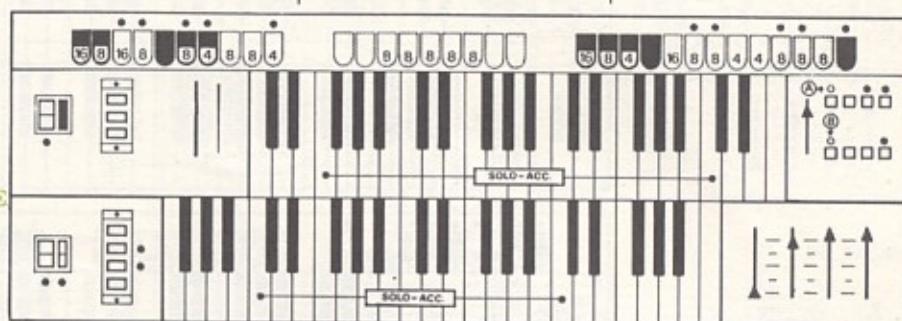

REG: 80 and A

SWANNEE RIVER

S. Foster

REG: 80 A - 2th B -

Upper


Lower

REG: 80 (1 and 2 Both hands lower manual)

B+

REG: 80 B+

REG: 83/B8

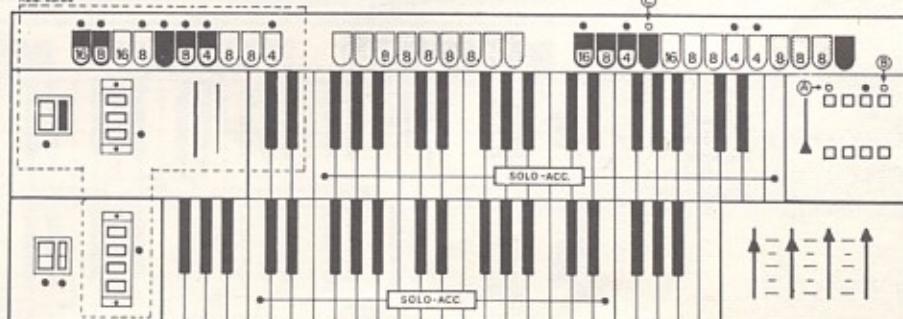

83
ORCHESTRA ORGAN
ORCHESTER ORGEL
ORCHESTRE ORGUE


I

ENSEMBLE-EFFEKTEN
ENSEMBLE-EFFEKTE

EFFETS D'ENSEMABLE
ENSEMBLE EFFECTS


ORCHESTRA-ORGAN
ORCHESTER-ORGEL
ORCHESTRE-ORGUE

II

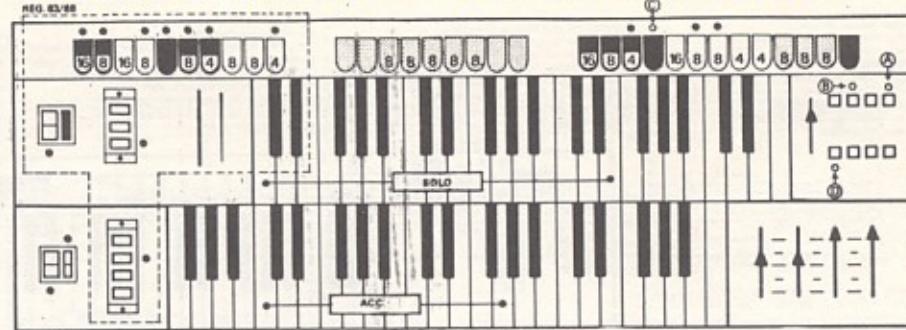


ORCHESTRA-ORGAN
ORCHESTER-ORGEL
ORCHESTRE-ORGUE

III

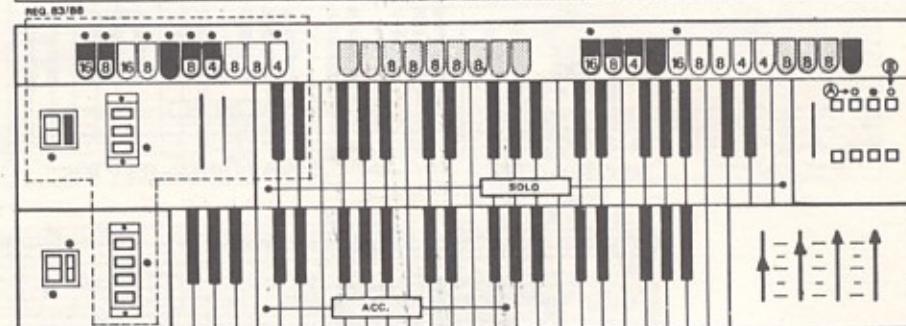


ORCHESTRA-ORGAN
ORCHESTER-ORGEL
ORCHESTRE-ORGUE

IV

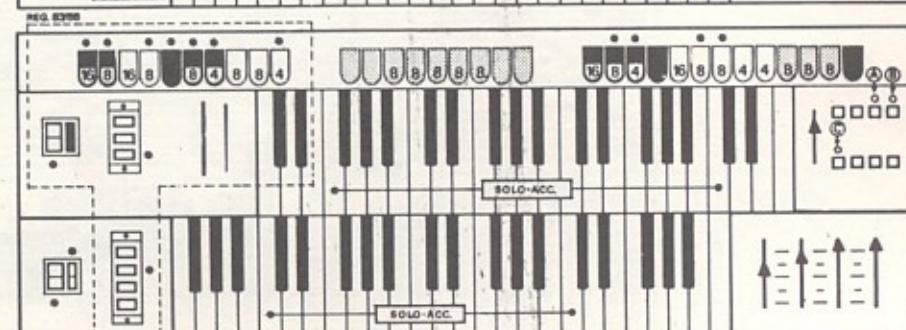


ORCHESTRA-ORGAN
ORCHESTER-ORGEL
ORCHESTRE-ORGUE

V

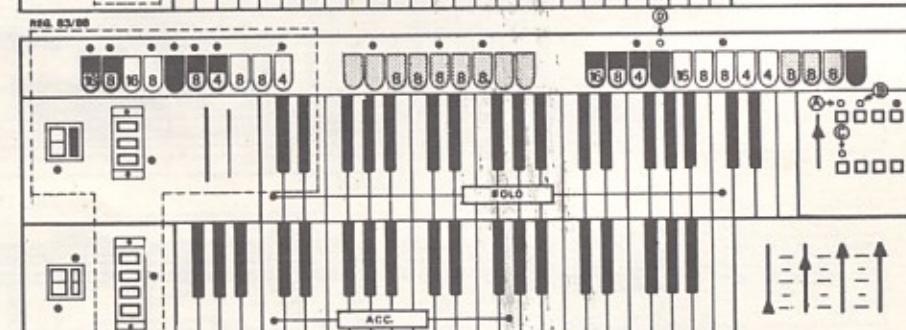


ORCHESTRA-ORGAN
ORCHESTER-ORGEL
ORCHESTRE-ORGUE

VI

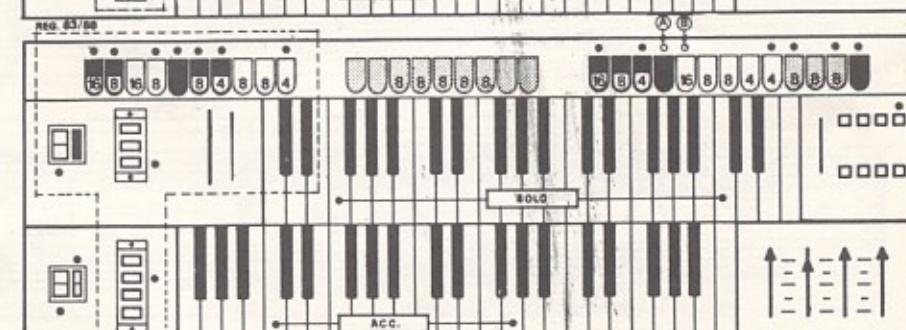

ORCHESTRA
ORCHESTER
ORCHESTRE


Modern/
Classical
Modern/
Klassisch
Moderne/
Classique

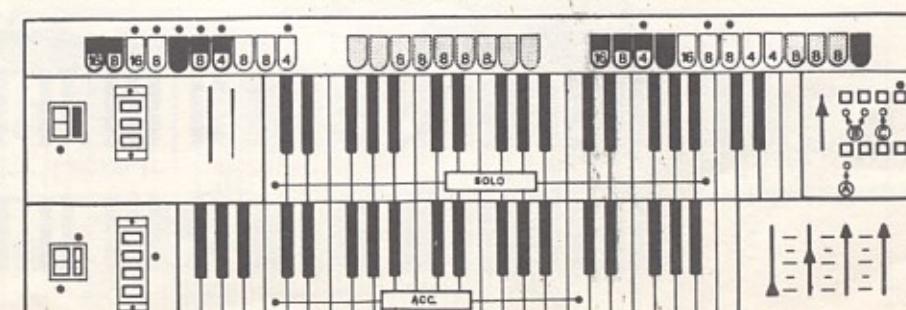

ENSEMBLE EFFEKten
ENSEMBLE .EFFEKTE
EFFETS D' ENSEMBLE
ENSEMBLE EFFECTS

ORCHESTRA CLASSICAL
ORCHESTER KLASSISCH
ORCHESTRE CLASSIQUE

I

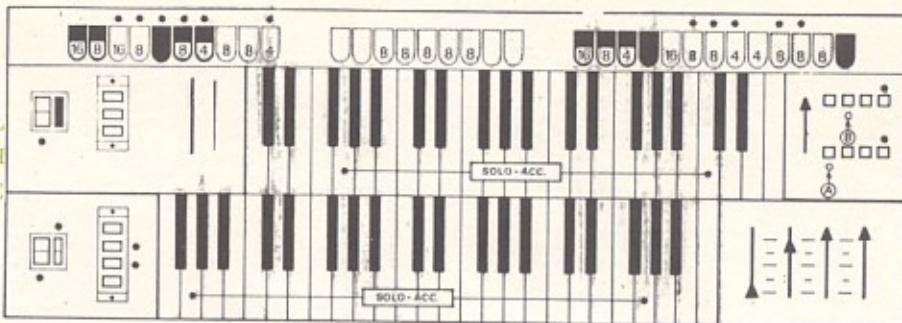

REG: 95 2th. A + B+

IMPROVPTU

Fr. Schubert


Upper
Both hands;
Lower Manual
Ped F G | A C | F | F

Both hands upper manual
Bes A C F | F G

A E F | F Bes F C F :

ORCHESTRA CLASSICAL
ORCHESTER KLASSISCH
ORCHESTRE CLASSIQUE

II

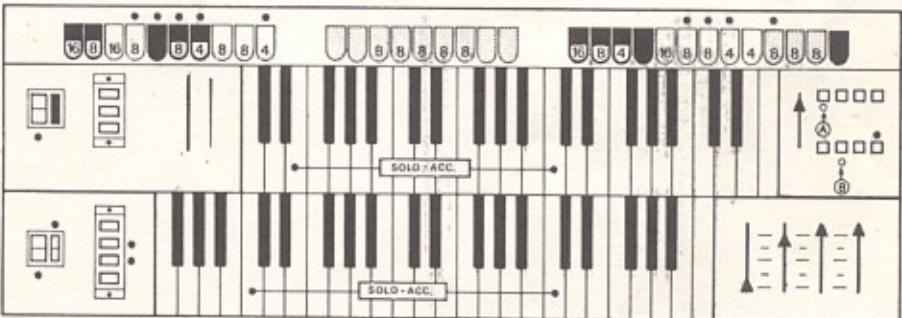

REG: 96 and B

LA TRAVIATA

Both hands lower Manual
2^e x → A E E Dis E -

E A D C

Bes B A A A A 3x